


Pool Cover Air Pillow



Prevents rain, snow & debris buildup


Air Pillow for Above Ground Pool Winter Covers

X

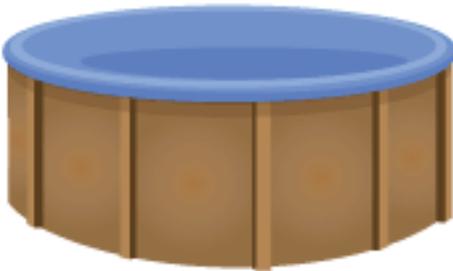


Air pillows support the center of winter cover and inhibit the buildup of snow, ice, and debris during the winter months. Raising the center of the winter pool cover allows debris to reposition toward edge for easy disposal.

✓

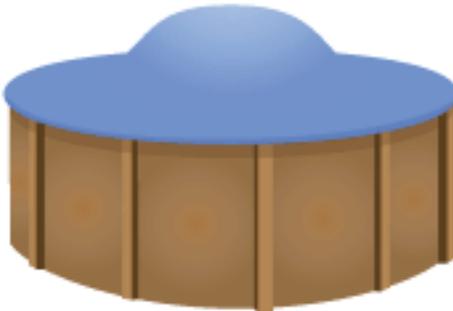

The inflatable pillow also supports the winter cover while absorbing the pressure of the freezing water. This will help prevent damage to walls due to water expansion when frozen. In this case an Air Pillow can be a sacrificial item!!! Blow up the pillow two-thirds of the way to allow for expansion.

X

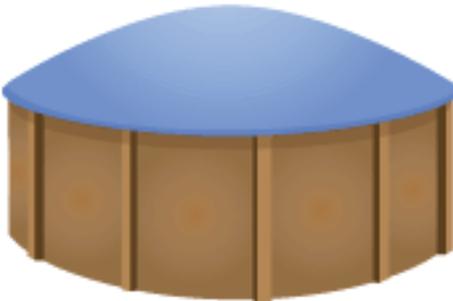

Without an air pillow, winter pool covers can sag due to rain and snow and collect unwanted debris.

Instructions:

Follow instructions to chemically treat pool and drain or install a winterizing plate to cover skimmer and plug return. Inflate floatation pillow(2/3) and secure the pillow in the center of pool by tying grommeted ends with nylon rope to pool sidewall or use a pillow pal to keep the pillow centered with the cover.

4' x 5' Air Pillow

15', 16', 18' Round

Place the cover over pillow to form a loose pyramid, letting the cover fall in the water around the circumference. Pull end of cover over pool wall.

4' x 8' Air Pillow

21', 24', 27' Round

It is important that the cover fits snugly against the wall to prevent wind from getting under the cover and causing the cover to billow and flap. Use Cover Wrap in high wind area.

4' x 15' Air Pillow

30', 33' Round & All Oval Pools

Do not allow more than 2-3 inches of water to collect on the winter cover, use a siphon or electric pump to remove excess water but always keep a small amount of water on cover to keep it held down.